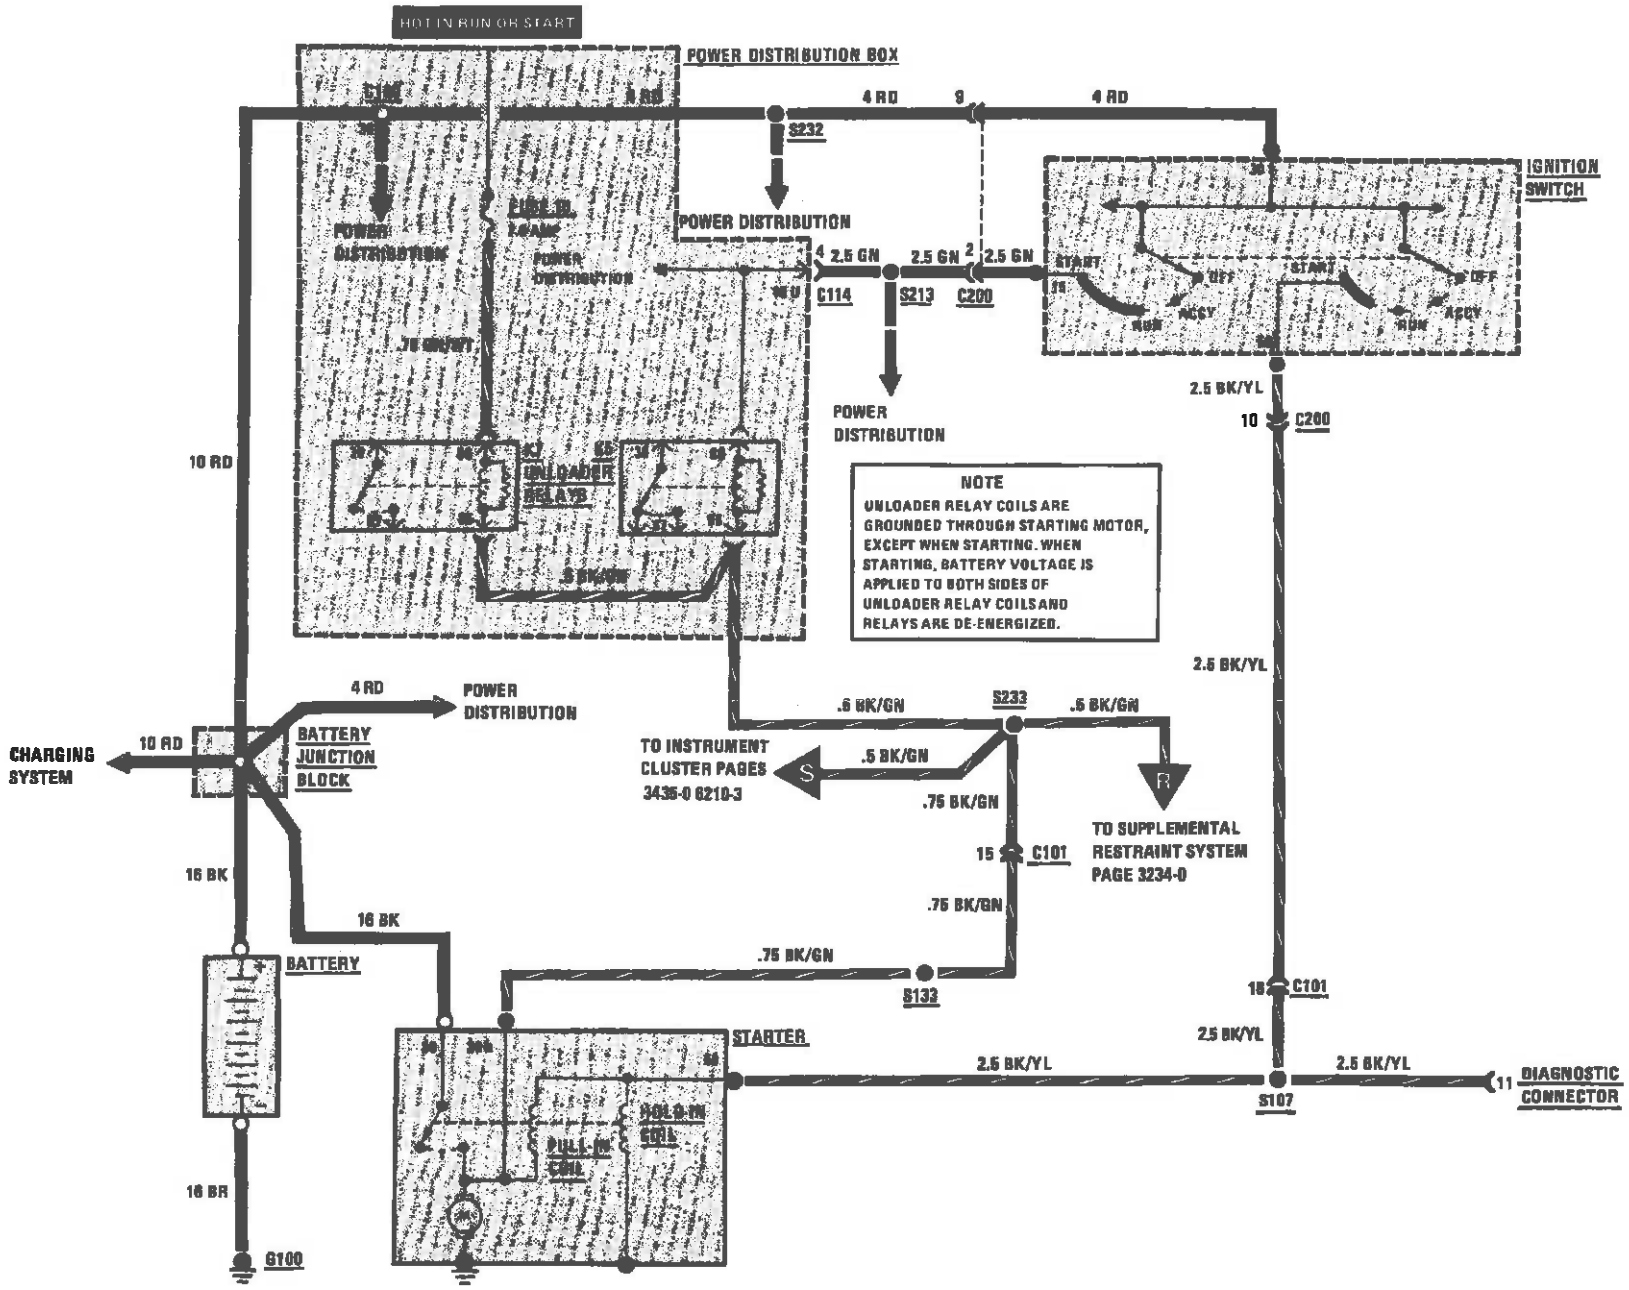
HOT IN RUN OR START
POWER DISTRIBUTION BOX
4 RD
S232
POWER DISTRIBUTION
IGNITION SWITCH
2.5 GN
C114
S213
C200
POWER DISTRIBUTION
2.5 BK/YL
10 C200
10 RD
UNLOADER RELAYS
NOTE
UNLOADER RELAY COILS ARE GROUNDED THROUGH STARTING MOTOR, EXCEPT WHEN STARTING. WHEN STARTING, BATTERY VOLTAGE IS APPLIED TO BOTH SIDES OF UNLOADER RELAY COILS AND RELAYS ARE DE-ENERGIZED.
4 RD
POWER DISTRIBUTION
CHARGING SYSTEM
10 RD
BATTERY JUNCTION BLOCK
.6 BK/GN
S233
.5 BK/GN
TO INSTRUMENT CLUSTER PAGES 3435-0 6210-3
.5 BK/GN
.75 BK/GN
15 C101
TO SUPPLEMENTAL RESTRAINT SYSTEM PAGE 3234-0
16 BK
16 BK
.75 BK/GN
.75 BK/GN
S133
BATTERY
STARTER
2.5 BK/YL
2.5 BK/YL
2.5 BK/YL
S107
11 DIAGNOSTIC CONNECTOR
HOLD-IN COIL
PULL-IN COIL
16 BR
G100