

Receiver Wiring Adaptor

IMPORTANT


Before starting, compare items on your invoice with items received. Thoroughly check packing materials. If an item is missing, please call **Crutchfield at 1-888-955-6000**.

120 70-1693

Revision 11/22/17





STEP 1 -- MATCH & CONNECT WIRES

- A. Match wires below to the matching function of each wire on your receiver (refer to instructions supplied with receiver). The wire colors of your new receiver may, or may not, match the wire colors of the adaptor. Match adaptor and receiver wires by function, disregarding color.
- B. Individually tape off any unused wires.
- C. Make final wiring connections following instructions on the next page.

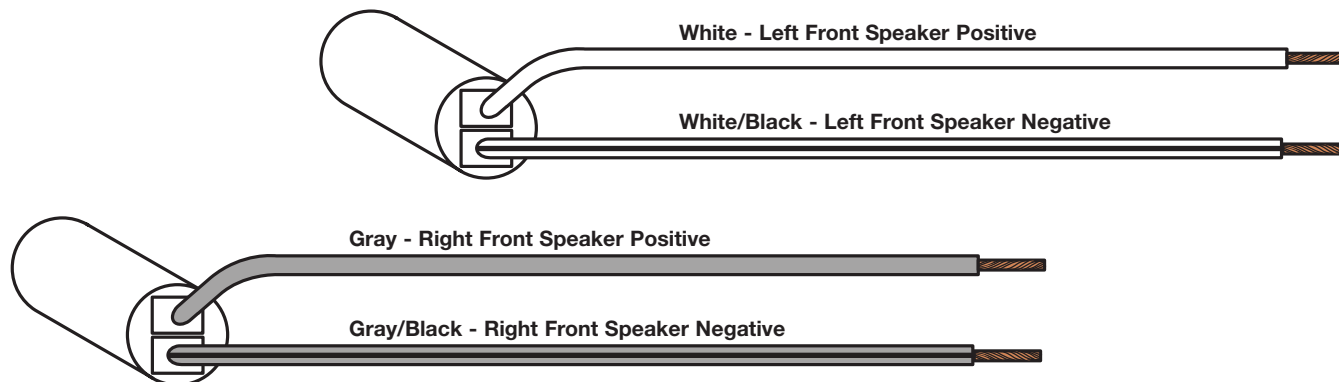


STEP 2 -- CRIMP CONNECTIONS

Tools & Parts Required ▶

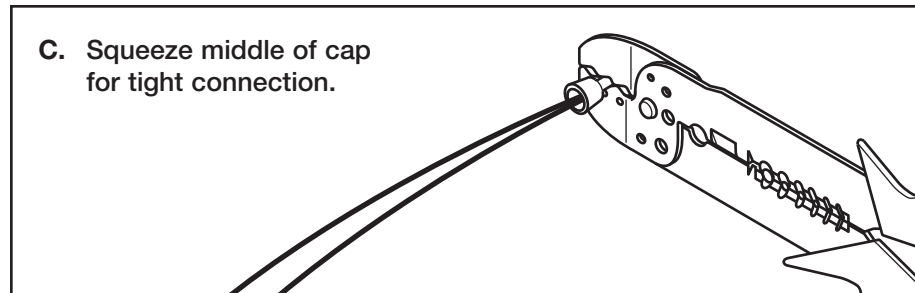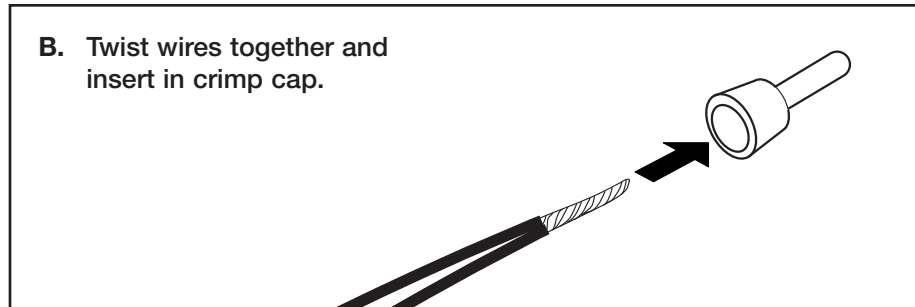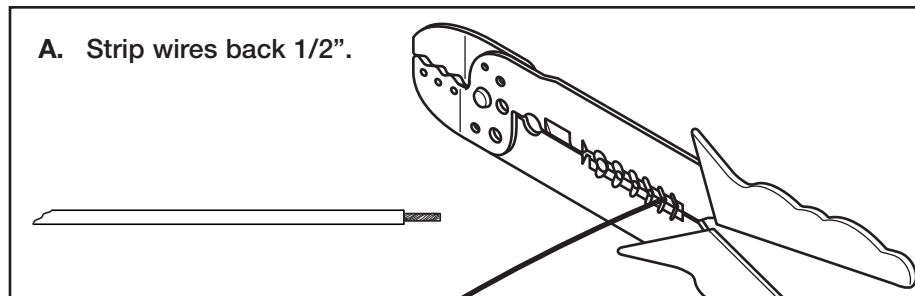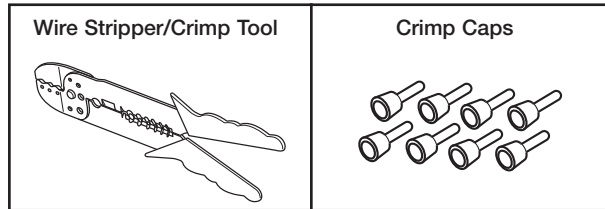

STEP 2 -- CONTINUED

- D. Complete crimp connections for all necessary wires.
- E. Be sure to wrap any wires from the Wiring Adaptor that are not necessary (wires with no match from the new receiver) with electrical tape.

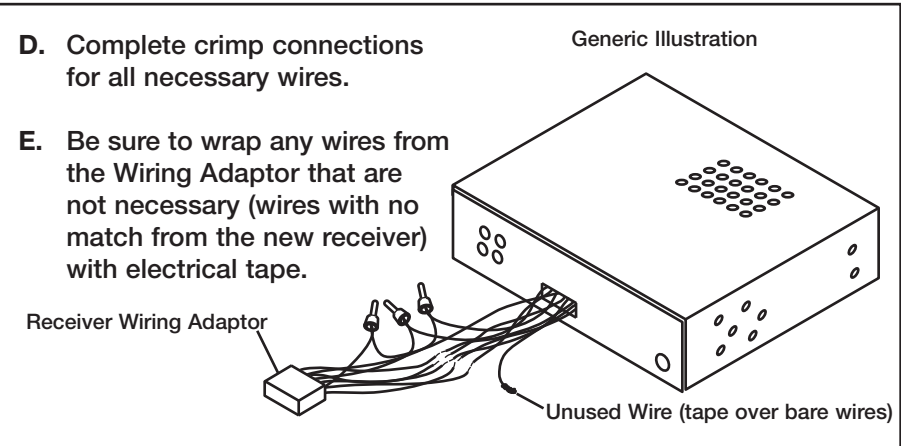

STEP 3 -- APPLICATION

- A. When ready to install the receiver, plug the wiring Adaptor from the new receiver, or receiver assembly into the factory radio harness(es) in the vehicle dash.

