



# BMW E30

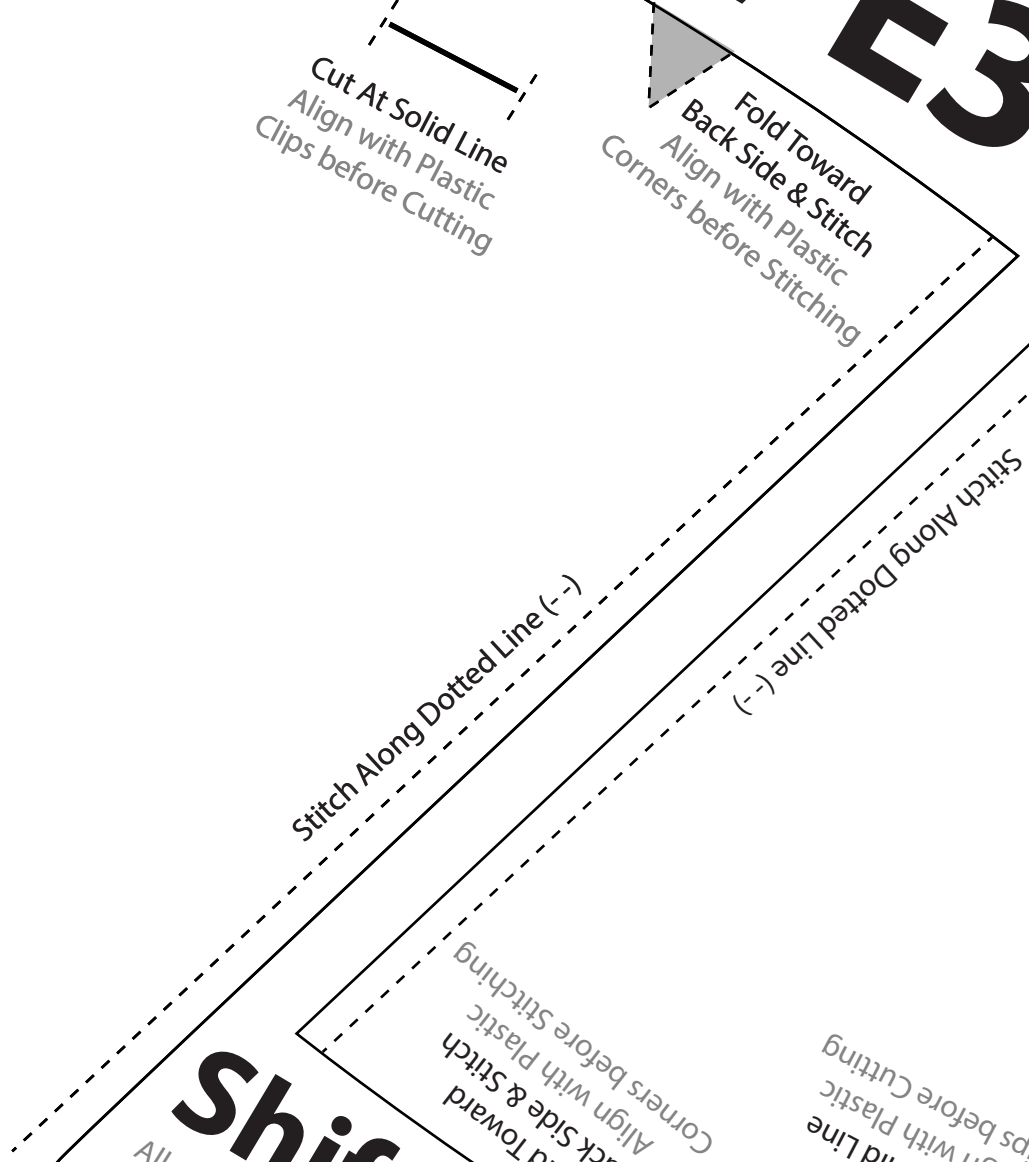

# Shift Boot Pattern

All measurements are approximate, it is suggested you test fit after sewing main boot before adding clip cuts & wedges.

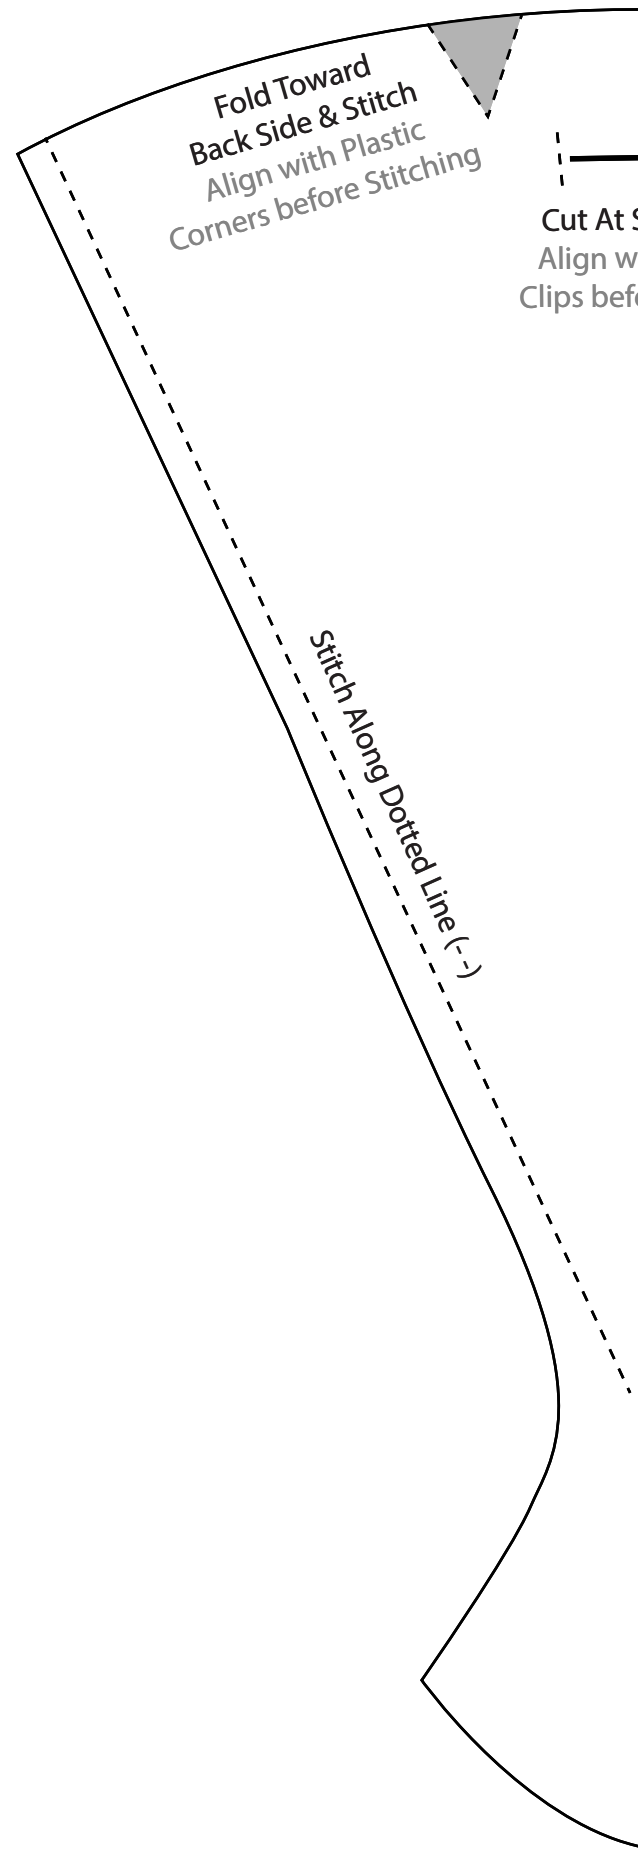